


*David-Link*

# DL-360N A3 Laminator

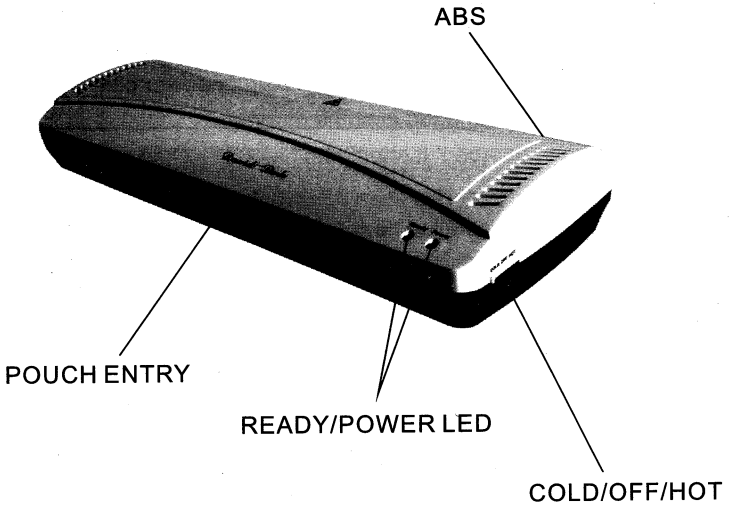

**Thank you for choosing our laminator. We aim to supply quality machines that create excellent results. Before operating the laminator, please read simple user instructions for your reference.**

When using electrical equipments, the basic precautions should always be performed to avoid risk of injury or electrical shock including the following:

1. Always unplug the machine when not in use.
2. This machine is not intended for use by children, or person with physically and mentally incapacity, and lack of experience or knowledge. They should be given supervision and instructions in order to use the machine with the person responsible for their safety.
3. The laminator turns very hot when use and proper care should be taken when handling the machine.
4. Protect against the risk of electrical hazards. Do not immerse the power cord or plug in the water or any other liquids, nor near the water.
5. Do not insert any metal or other foreign materials such as jewelry, hair, fingers or clothing in the machine.
6. Remove paper clips and staples before laminating.
7. Do not operate the machine with damaged plug or power cord even after the machine has been malfunctioned or damaged in some manner.
8. If the power cord is damaged, it should be fixed by a Professional Engineer to avoid hazards.
9. The machine should be installed near the outlet socket and the socket should be accessible.
10. Only laminate the paper or board. Do not laminate the unusual objects.
11. Do not use aerosol dusters and cleaners.
12. Do not spray or lubricate the machine.

#### **Setup:**

1. Operate the machine on a flat and stable surface.
2. Ensure enough clear space at the rear of the machine for the exit of the laminated material in the machine.
3. It operates with laminating pouches 150 (2x75) micron – 200 (2x100) micron thick (Credit card size to A3 size)

#### **Operating the Laminator:**

Laminator is operated by a rocker switch, located at the right hand side of the machine. There are 3 positions COLD (I) OFF (O) and Hot (II).

1. Plug the machine cables into a convenient 13 Amp domestic supply outlet.

2. For COLD laminating, select the COLD setting (I), the Green light will come out when turn on straight away then COLD laminating can begin, (Please note that you need special COLD Laminating Pouches).
3. For HOT laminating, select the HOT (II) setting, HOT laminating can begin when the ready light turns Green (Allow approx. 3-5 minutes heat up time). If choosing COLD laminating after you had done HOT laminating the machine must be allowed to be cool in room temperature again.
4. Prepare the laminating pouch for inserting into the machine. See how to load a laminating pouch below. Do not use pouches thicker than 200 mic (2x100 mic per side).
5. When the machine has reached operating temperature, you may insert the pouch (sealed edge first) squarely into the machine until it engaged with the rollers. Never insert a pouch open edge into the machine.
6. The pouch will move through the machine and exit at the rear.
7. During the process the READY light might turns out as heat is absorbed by the laminating pouch. This is normal.
8. Turn the laminator to OFF (O) after use.
9. Remove the plug from the power supply.

#### **Important!**

Do not touch the top of the machine during use, as it gets very hot. The Intermittence Operation on this machine is 30 mins ON and 10 mins OFF, but we recommend that you allow the machine to cool down for at least 15 minutes after 30 minutes use. Do not place items on top of the machine at any time.

#### **Laminating Capacity:**

This is a personal laminator designed for hot and cold lamination.

The minimum laminating thickness is 150 (2x75) microns and the maximum thickness is 200 (200x100) microns.

#### **How to load a laminating pouch:**

The laminating pouch is sealed along one side. Open the pouch and place the paper to be laminated centrally inside the pouch as close to sealed edge as possible. Ensure there is an equal border all around the paper (eg: A3 paper should have 3mm border). The sealed edge (not the open edge) is placed into the entry slot to start the lamination process.

#### **Warranty & Service:**

Never try to service the machine by yourself. This machine is guaranteed for 12-months warranty from the date of purchase, subject to normal use. If the laminator is under warranty, return the machine to the point of purchase for replacement or repair.

## **Specifications:**

### **Hot and cold laminating for different usage**

Rollers:	2 Roller (hot shoe)
Entry width:	330mm
Min lamination thickness:	150(2x75) micron
Max lamination thickness:	200 (2x100) micron
Min pouch size:	Credit card size (54x86mm)
Max pouch size:	A3 size (297x420mm)
Max lamination depth:	0.5mm
Lamination speed:	25cm / min
Warm-up:	3-5minutes
Power consumption:	365W
Input:	AC 220-240V,50Hz,
Dimensions:	440 x 142 x 65 mm (LxDxH)