

5. To maintain shredder performance and lifespan, please do not operate the shredder in an environment with hot/wet sources for long period.
6. Do not attempt to open the head unit or the power cable in any way by yourself. Do not use the shredder if any part of it is damaged. Contact your dealer for further assistance.
7. Please keep children and pets away from the shredder.

Shredder Specifications

| | |
|------------------------|--|
| Shredding Capacity: | 1CD, 1 DVD, 1 credit card, or 10 sheets of A4 paper per pass |
| Shred Type: | DVD/CD/Credit Card: Strip cut Paper: Cross Cut |
| Security Level: | 3 |
| Shred Size: | 4x45mm |
| Working Width: | 220mm |
| Input: | 220-240VAC, 1.0A |
| Bin Volume: | 21L |
| Shredding Speed: | 2.6m/min |
| Dimensions: (LxWxH) | 326x227x418mm |


PAPER SHREDDER USER MANUAL

David-Link







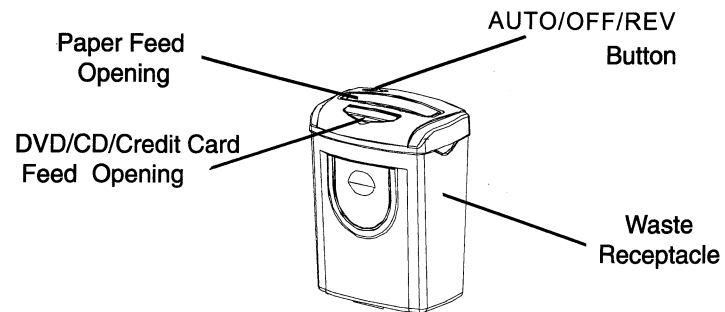


DL-4510

PLEASE READ CAREFULLY BEFORE OPERATING THE DL-4510 SHREDDER



Caution:

-  **Attention:** Incorrect operation may cause injuries to the user.
-  Please keep your hair away from the paper entry to avoid mishap.
-  Please do not touch the cutting blades with your bare hands.
-  Please keep soft cloth, neck ties and other objects away from the paper entry.
-  Please remove paper clip/pins etc before feeding the paper into the shredder.
-  Please do not allow children to operate or play with the shredder to prevent possible injuries to them from the cutting blades.
-  Please do not spray any flammable material(gas etc) on the shredder as sparking may occurs.

Operation Instructions:

1. Connect the shredder to an AC power source in accordance with the power specifications as indicated on the label at the bottom of the head unit. Turn the switch to the "ON/AUTO" position to put the shredder in standby mode.
2. Insert paper, credit card or CD into their designated feeding slots. The shredder will automatically start shredding the material and then revert to its standby mode when the shredding process is completed.
3. During normal shredding, the user can turn the switch to "REV" position for an

urgent stop. Any unshredded material will then be rolled out immediately.

4. If the paper being shredded is relatively wet or is made up of long fibers, it may wrap along the blades and reduce the cutting efficiency. In such case, alternate running the shredder in forward and reverse modes by switching between "ON/AUTO" and "REV" two or three times. The paper can then be easily cleaned off the blades.

Paper Jam and Overload Protection:

1. If too many pieces of paper is fed into the shredder at once, the shredder will slow down significantly or even stop completely. The user should immediately turn the switch to "REV" and then reduce the amount of paper to be fed into the shredder in order to restore normal shredding speed.
2. For continuous shredding of large volume of paper, it is recommended to feed not more than 5 pieces of paper each time and to limit the consecutive shredding time to 2 minutes per session. This will help to ensure that the shredder will be able to maintain its efficiency.
3. The shredder will automatically cut off its power in cases where the paper is jammed after long continuous operation or if high internal temperature is detected. In such instance, turn the switch to "OFF" for a while and then turn the switch to "ON/AUTO" to put the shredder to standby mode.
4. For safety reasons, the shredder cannot be operated if the head unit is not placed properly into the waste receptacle or is removed from the waste receptacle.

Safety Instructions:

1. Please locate the shredder near to the AC outlet for quick power disconnection in case of emergency.
2. Please keep objects such as ties, hair, necklaces etc away from the shredder as they may be accidentally entangled with the blades.
3. Please do not put non-paper items such as plastic, cloth etc into the shredder to prevent damage to the shredder or lowering of shredding performance.
4. Please switch off the shredder and unplug it from the AC outlet before removing the head unit or waste receptacle for cleaning. Regular cleaning of the waste receptacle is recommended.